## Programmable differential pressure transmitter SDE-P

## SDE-P

# Programmable differential pressure transmitter

#### Features

- Pressure measurement from  $\pm$  25 Pa up to  $\pm$  2.5 kPa ( $\pm$  0.1 to  $\pm$  10 inH<sub>2</sub>O)
- Programmable pressure output signal range
- Selectable square root function
- Set display range and value. This may be used to visualize air flow or air volume.
- Minimum and maximum pressure memory
- 0...10 V / 4...20 mA measuring signal (range programmable)
- · Selectable averaging signal
- Compact housing, easy installation

#### **Applications**

- Pressure measurement in the field of heating, ventilation and air conditioning.
- Measuring of air flow velocity
- Measuring and control of positive or negative pressure for example for clean rooms.
- Measure exactly the range you need
- Recording of minimum and maximum values for critical environments
- Supervision of critical pressures.

#### **Functions**


Depending on the type of the device, the transmitter measures the pressure either by the use of a ceramic or a micro thermal flow sensor. The signal is temperature compensated and calibrated. The microprocessor samples the pressure once per second. It calculates an averaging signal over a preset number of seconds and generates an output signal based on minimum and maximum pressure values.

#### Minimum and maximum values

Using the programming tool, the user has the option to read out and reset minimum and maximum values. The minimum and maximum values may be sent to the output using OP00. This way the sensor may be used to supervise the temperature for critical environments. The minimum and maximum values are saved into the EEPROM every minute. They will still be available after a power failure.

## **Square root function**

The input signal is multiplied with a square root function. The signal curve will thus change to the typical square root shape. This is useful to directly measure and control air flows. As air flow is proportional to the square root of differential pressure. The picture on the right shows the shape of the square root function.

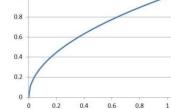

#### Signal fine tuning

The pressure-signal may be fine-tuned to fit your system. Define your signal through a minimum and maximum pressure limit. The output will then only react if the pressure is above the lower limit. The output signal will be spanned to the upper limit. The full output signal resolution may this way be used even only a fraction of the pressure sensor signal range is used. A 0-300 Pa transmitter may thus be converted into a 0-100 Pa transmitter. (Note: the sensing resolution will thus not be improved, only the output signal resolution).

## Ordering

Name	Item code	Description/option
SDE-P1	40-30-0105	Pressure range $\pm$ 25 Pa ( $\pm$ 0.1 inH <sub>2</sub> O)
SDE-P2	40-30-0158	Pressure range ± 100 Pa (± 0.4 inH <sub>2</sub> O)
SDE-P3	40-30-0106	Pressure range ± 500 Pa (± 2 inH <sub>2</sub> O)
SDE-P4	40-30-0107	Pressure range ± 2.5 kPa (± 10 inH <sub>2</sub> O)

#### **Accessories**

OPA-S	40-50 0006	External display module square form factor
OPU-S	40-50 0030	External display module rectangular form factor
AMP-1	40-51 0087	Differential pressure probes with 0.5m tube Ø 4 mm

# Programmable differential pressure transmitter SDE-P


# **Technical specification**


## Installation and safety advice

**Caution!** This device is intended to be used for comfort applications. Where a device failure endangers human life and/or property, it is the responsibility of the owner, designer and installer to add additional safety devices to prevent or detect a system failure caused by such a device failure. Vector Controls or its affiliates cannot be held liable for any damage caused by such a failure. Failure to follow specifications and local regulations may endanger life, cause equipment damage and void warranty.

Power supply	Operating voltage	24 VAC 50/60 Hz ± 10%, 24 VDC ± 10%		
	Power consumption	Max. 1 W, 2 VA		
	Terminal connectors	For wire 0.342.5 mm <sup>2</sup> (AWG 2213)		
Sensing probe	Product type	SDE-P1 SDE-P2 SDE-P3 SDE-	-P4	
	Pressure range		5 kPa ) inH₂O	
	Offset	0.4% FSS 0.2% FSS 0.2% FSS 0.2%	% FSS	
	Accuracy (5 °C to 55 °C)	2.5% 2.5% 2.5% 1% F	FSS	
	Accuracy (0 °C to 70 °C)	3.5% 3.5% 3.5% 2% F	FSS	
	Stability over 1 year	0.1 Pa 0.1% FSS 0.1% FSS 0.1%	% FSS	
	Pressure sensing element	Thermal micro flow Ceramic		
	Tolerable overload	200 kPa (30 PSI) 69 k	Pa (10 PSI)	
	Burst pressure	500 kPa (75 PSI) 200	kPa (30 PSI)	
Signal outputs	Analog outputs Output signal Resolution Maximum load	DC 0/210 V / 0/420 mA 10 Bit, 9.7 mV Voltage signal: $\geq$ 1 k $\Omega$ Current Signal: $\leq$ 250 $\Omega$		
Environment	Operation Climatic conditions Temperature Humidity Transport & storage Climatic conditions Temperature	To EN 60721-3-3 class 3K5 070 °C (32158 °F) < 95% RH, non-condensing  To EN 60721-3-2 and EN 60721-3-1 class 3K3 and class 1K3 -3080 °C (-22176 °F)		
	Humidity	< 95% RH, non-condensing class 2M2		
Standards	Mechanical conditions  conformity RoHS directive EMC directive Low voltage directive  Degree of protection	2011/65/EU 2014/30/EU 2014/35/EU IP30 to EN 60529		
	Safety class	III to EN 60536		
General	Material	Polycarbonate PC (UL94 class V-0)		
	Color	RAL 9016 (Traffic white)		
	Dimensions (H x W x D):	104 x 60 x 23 mm (4.1" x 2.4" x 0.9")		
	Weight (including package)	75 g (2.7 oz.)		

## **Dimensions mm (inch)**

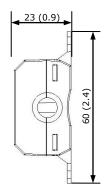

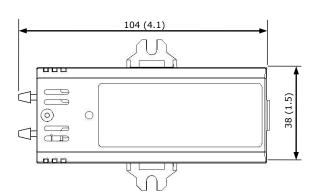


# **VECTOR**

## Programmable differential pressure transmitter SDE-P

#### **Installation**

See installation sheet no. 70-000549 (www.vectorcontrols.com).

#### Wiring diagram

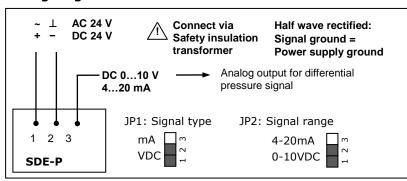

#### Signal range selection:

Both JP1 and JP2 must be placed for current or voltage signals. For different ranges than 4-20mA or 0-10VDC, adjust OP01 and OP02.

#### Example:

For a 2-10VDC signal place JP1 to VDC, JP2 to 0-10VDC and set OP01 to 20%.

# **Configuration parameters**

The transmitter can be adapted to fit perfect into the application. Its parameters are set with the operation terminal OPA-S or OPU-S. These devices may be used as remote indicator. In order to use all the functions outlined below and have a correct display, use only OPA-S or OPU-S devices with firmware version V1.5 or later.

## **Pressure input configuration**

Parameter	Description	Range	Standard
IP 00	Display of pressure signal:	ON/OFF	ON (%)
	OFF = no unit, range is defined with IP06 and IP07,		
	ON = range is fixed to -100 to 100%		
IP 01	Samples taken for averaging control signal. The SDE-P is a	1255	20
	fast sensor. It measures every 0.1 seconds and applies a low pass filter that is controlled through this parameter. A setting		
	of 20 equals an averaging time of about 3 seconds.		
IP 02	Calibration	-1010%	0
IP 03	Minimum pressure range.	-100100%	W00: -100%
11 05	Pressure when output is at its minimum	100100 /0	W01: 0%
	If used with OPA-S V1.5 or later: -100%100%		W02: -100%
	If used with earlier versions of OPA-S, the value is shown in		
	percent of full measuring scale:		
	0 = - 100%, 100 = 0%, 200 = + 100%		
IP 04	Maximum pressure range.	-100100%	W00: 100%
	Pressure when output is at its maximum.		W01: 100%
	If used with OPA-S V1.5 or later: -100%100%		W02: 0%
	If used with earlier versions of OPA-S, the value is shown in		
	percent of full measuring scale:		
70.05	0 = - 100%, 100 = 0%, 200 = + 100%	011/055	0.55
IP 05	Square root measurement function	ON/OFF	OFF
	OFF = linear measurement		
IP 06	ON = the input signal is processed with a square root function	0255	100
17 06	Only has an impact on OPA-S V1.5 or later:  Display value range. Converts the display range if IP00 is OFF.	0255	100
	Value shown on display unit when output is 100%. May be		
	used to visualize air flow or air volume based on differential		
	pressure.		
IP 07	Only has an impact on OPA-S V1.5 or later:	04	2
	Display value scale.		
	$0 = \times 0.001$ (only for OPU-S)		
	1 = x 0.1 (only for OPU-S)		
	2 = x 1		
	3 = x 10		
	4 = x 100		

## **Analog output configuration**

Parameter	Description	Range	Standard
OP 00	Configuration output signal:	02	0
	0 = Feedback pressure input		
	1 = Feedback pressure minimum value		
	2 = Feedback pressure maximum value		
OP 01	Minimum limitation of output signal.	0Max. %	0%
	Keep at 0% for selection with JP2		
OP 02	Maximum limitation of output signal	Min100%	100%
	Keep at 100% for selection with JP2		